


## **HOW TO MEASURE A BOX BAY WINDOW**

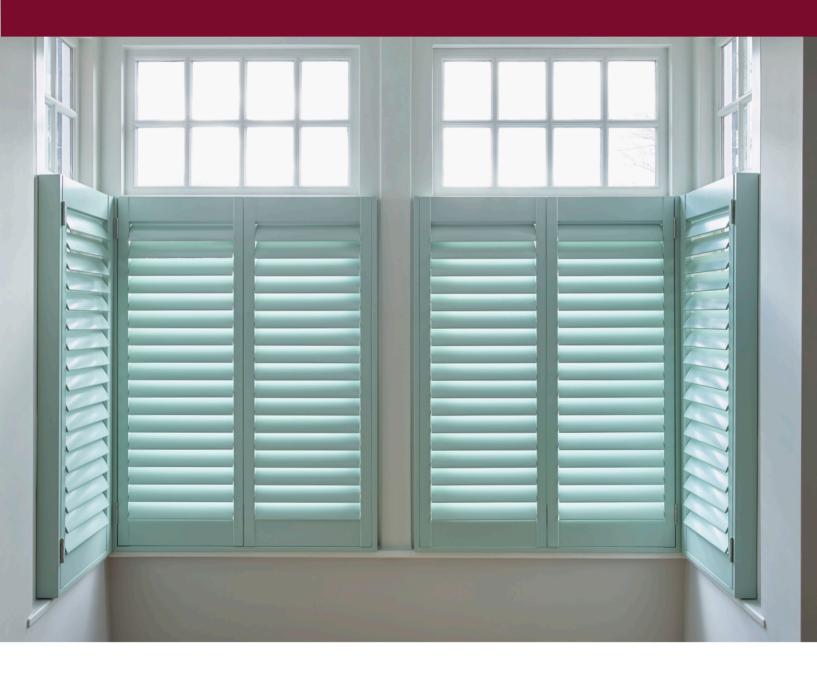

# A simple measure guide from The Shutter Store



## Before you start you will need:

- · A good quality steel tape measure
- · A spirit level
- · Paper and pen
- · Frame Templates (found at the back of this guide)

### Tips!


1. Note down your sizes.


- Go have a break, then come back to double check your sizes before you place your order.
- You may wish to upload a clear photo
  of your window with your order.
  This helps our team have
  a full understanding of
  your needs.


## What is a box bay window?

A Box Bay has two or more windows that join at a right-angle (90 degrees).

Each section of your bay window will have it's own shutter. You will need to use our frame templates to to measure the correct sizes for each part of your bay.

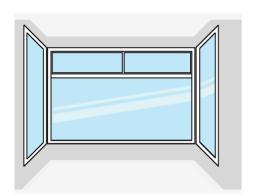

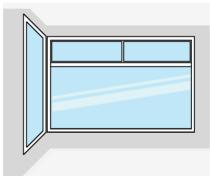

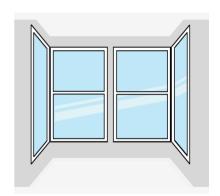

## How many Frame Sides?



Full Height & Tier on Tier Shutters for Windows

Frame Sides: All



Cafe Style Shutters for

Windows

Frame Sides: Left Right Bottom



Full Height Shutters for

Doors

Frame Sides:

Left Right Top

## Important to Note:

If your windows opens Inwards contact us before measuring. You may need an alternative fitting for your window.

We're here to help

**\** 0800 0747 321





## Step 1: Choose Your Frame


#### Option 1 - Vintage L (Outside Mount)

The Vintage L frame comes with pre-drilled holes on the OUTSIDE of the frame.

It can be mounted directly onto the window frame or architrave.

It should be fitted onto a flat surface, which can also accommodate the screw fixings.

This option is typically suited to Sash window bays, or bays that do not have a suitable recess to fix into.

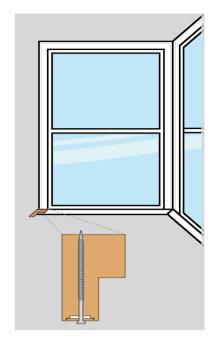


#### Option 2 - Plain L (Inside Mount)

The Plain L Frame is supplied with pre-drilled fixing holes on the INSIDE of the frame.

This frame is fixed into the window sill and the top of the recess. It should also be fixed into the recess walls on the far left and right of the bay. You will screw the corners into the corner posts provided for extra stability.

It can be positioned tight against the window, or pulled forward to leave space for handles, vents or trim. Just remember that you must fit your shutters in the same place as you positioned the templates when measuring.

This is a good option if you do not want to drill into your window frames.

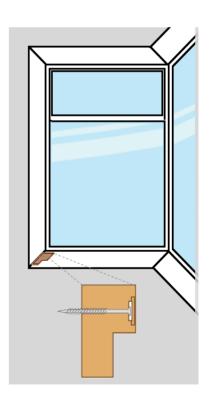

Important: Both types of L frame are supplied with pre-drilled holes and cover strips to hide the screw heads on installation.





## Step 2: Choose Your Frame Depth

Choosing the correct depth of frame is very important, it will ensure that your slats have clearance to tilt without fouling the window or any obstructions.

- 1. Decide which slat size you would like to order (64mm, 76mm, 89mm or 114mm)
- 2. Measure any handles or obstructions which project from the window. **Top Tip:** Think about where the back of the shutter frame will be, measure how far the handles protrude past this point.
- 3. Refer to the table of recommended frame depths below to choose the right depth of L Frame.

#### Essential & Hardwood

We offer four depths of Vintage L frame in the above ranges. However, if your required combination is not shown below, please contact us directly so that we can discuss alternative options.

Handle Projection	No Handles	10-20mm	20-30mm	30-40mm	40-50mm	50mm+
64mm Slats	57mm L	67mm L	87mm L	87mm L	97mm L	Contact Us
76mm Slats	57mm L	87mm L	97mm L	97mm L	Contact Us	Contact Us
89mm Slats	67mm L	87mm L	97mm L	Contact Us	Contact Us	Contact Us
114mm Slats	87mm L	97mm L	Contact Us	Contact Us	Contact Us	Contact Us


Important: You do not have to use the same frame depth for each section of your box bay, if not all windows have projecting handles or obstructions.

Email our expert team for full advice. Send a clear photo of your window to hello@theshutterstore.co.uk

Call us today on 0800 0747 321





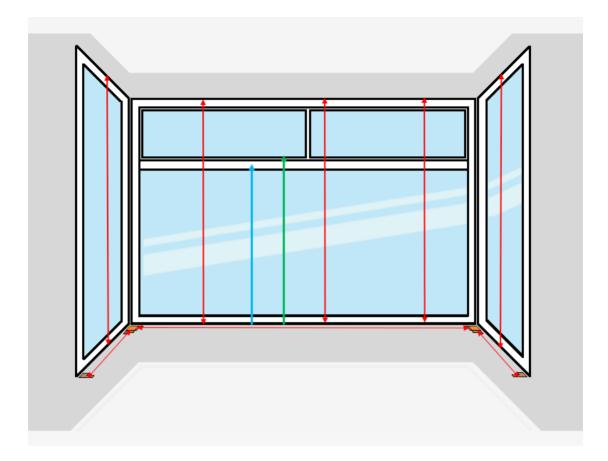


- 1. Position the templates as shown. Be sure not to position the frames in front of window handles. Measure the Width of each section including the templates (measure from outside edge to outside edge)
- 2. Measure the Height of each section. You should order the same height for all windows in the bay. This will ensure all rails and slats line up evenly.
- 3. We recommend deducting 4mm from your width and 4mm from your height.
- 4. For a Midrail measure from the bottom up to the point you'd like the midrail to be centred. Use the same Mid rail height for all sections\*
- 5. To measure the height of Cafe Style shutter or a Tier on Tier Split, measure from the bottom up to where you'd like the finished height of the lower panels, again using the same dimensions for all sections.
- 6. Please request a pair of corner posts to be added to your order (use Special Notes box within online order). They are a standard size of 55mm by 55mm and fit tight into the corner created where your frames meet. They are free standing and the frames are screwed into them to add stability.

<sup>\*</sup> Please note manufacturing may need to move the midrail up or down by half a louvre size from the dimensions you submit.



## Box Bay:




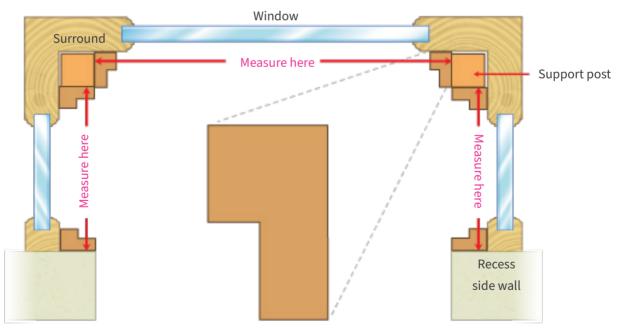

Important: The templates are the foot print of the vertical frames. They must not overlap each other and they must not be positioned directly below a window handle.



## Frame Templates - Essential & Hardwood

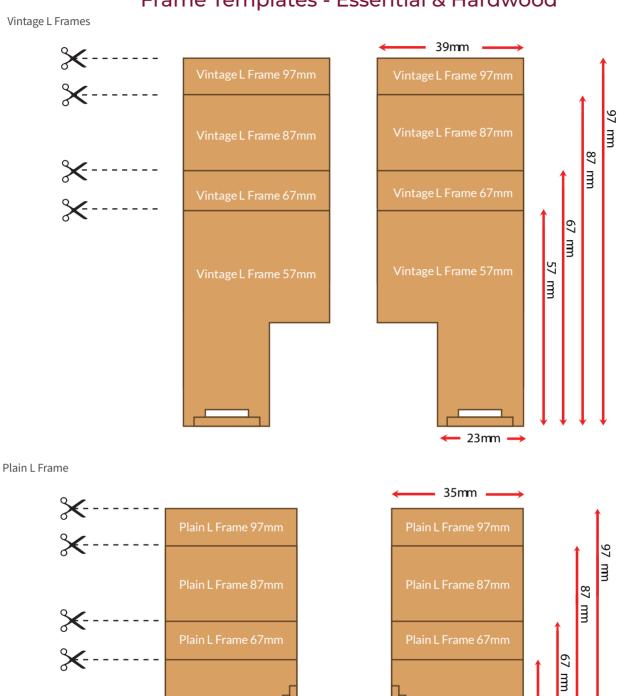



We're here to help

**\** 0800 0747 321

www.theshutterstore.co.uk

← 19mm →